






Tel: 02 43 13 49 49 Fax: 02 43 30 26 16 www.qama.fr

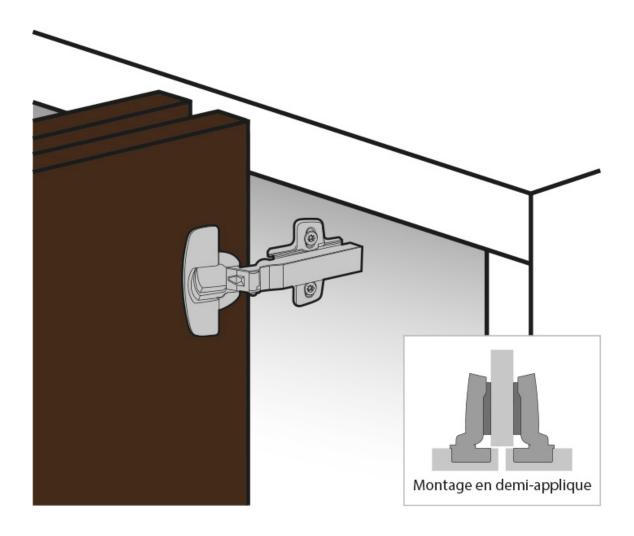




http://www.qama.fr/charniere-sensys-8631i-p57039



Tel: 02 43 13 49 49 Fax: 02 43 30 26 16 www.qama.fr



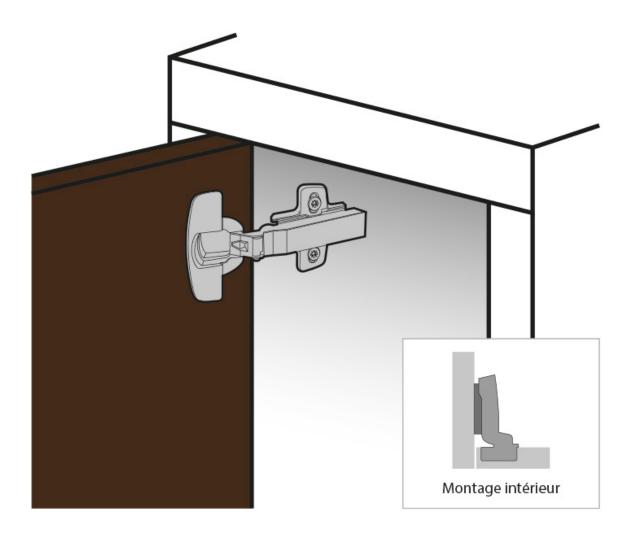





Tel: 02 43 13 49 49 Fax: 02 43 30 26 16 www.qama.fr



Montage du boîtier	Schéma de perçage	Alésage de fixation ø x T mm
à visser TH 52	5,5 C Ø 35 52	-
à enfoncer TH 53		ø 10 x 11
avec manchons à expansion prém. TH 58		
	9,5 C	
à enfoncer TB 53	Ø 35 45 Ø x T	ø 8 x 11

http://www.qama.fr/charniere-sensys-8631i-p57039

Fax: 02 43 30 26 16

Tel: 02 43 13 49 49

